



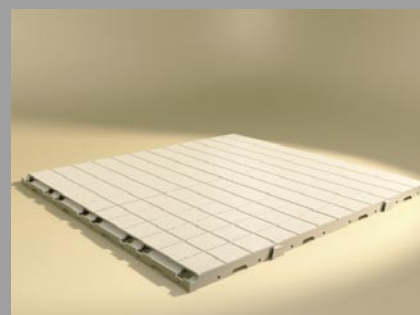

Caravanning with clean floors and warm feet

Real caravanners use IKAFLOOR plastic awning flooring. The benefits are obvious. When much time is spent in the awning, it is nice that the floor is level, the carpet lies flat, and cold feet are a thing of the past, even in spring and autumn.


IKAFLOOR awning flooring offers many advantages. It is very easy to install with no need for tools as the tiles are equipped with dowels, allowing them to be joined together in the same way as building blocks. It is easy to store and exceptionally durable. It is light weight, making it easy to transport. IKAFLOOR can be used with or without carpeting. IKAFLOOR is available in grey or black. It is also ideal as a doormat at the entrance to the awning, or if only partial flooring is required.

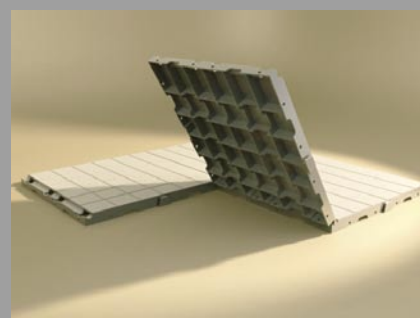

IKAFLOOR



1
Spread the fibre fabric over the entire area. The fabric allows the soil to breathe and helps keep it dry. Ensure that the fabric extends 30-35 cm beyond the awning walls as this will prevent them from being splashed with dirt.

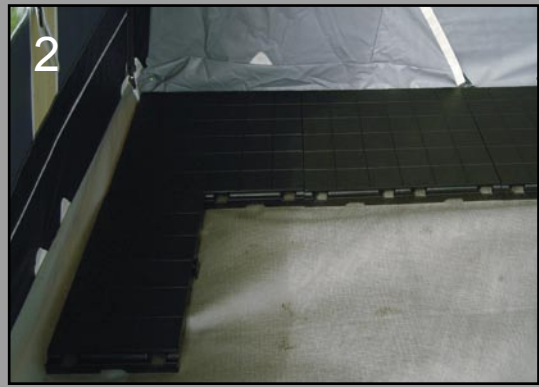

2
Lay the IKAFLOOR plastic flooring, ensuring that the rows are staggered. Begin in the left-hand corner and lay floor tiles along the length of the caravan. Start every second row with a half tile.



3
Laying IKAFLOOR requires no tools.



4
The entire floor can be laid in a matter of minutes.



5
Carpet


Fibre underlay – laid on top of the IKAFLOOR tiles to provide a soft and comfortable liner that also gives insulation.

IKAFLOOR

Fibre fabric



6

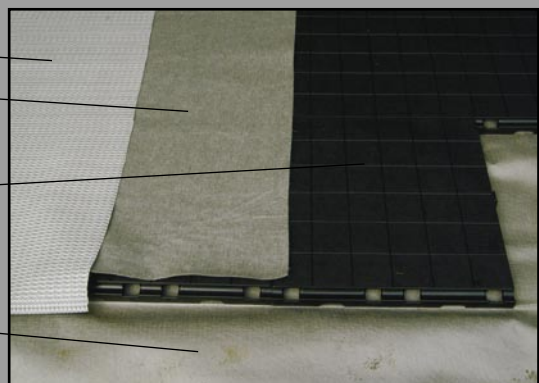

Distributor:

